
Installing the Multi-channel Film Feeder (MFF)

Before using the Multi-channel Film Feeder (MFF) with your digitizer, you need to first mount it onto the digitizer. Follow the instructions and graphs below to assemble and install the MFF correctly.


1 Unpack Contents

Unpack the package and check for the major components shown below.

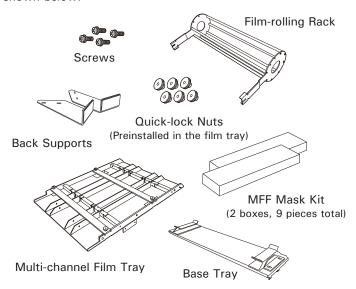


2. Attach the Back Support

- Lay the Multi-channel Film Tray flat or stand on a stable, flat surface, and locate the screw holes located on both sides of the film tray.
- Align the holes and insert the screws through the holes on the Back Support and into the screw holes on the film tray to secure two Back Supports separately on both sides of the film tray.

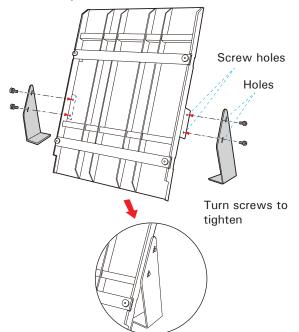


$oldsymbol{3}_{oldsymbol{\prime}}$ Install the Film-rolling Rack

- Hold the Film-rolling Rack up carefully, and locate the notches on the end of the arms of the rack.
- Locate two protruding shafts on both sides of the Multichannel Film Tray; then, snap the notches on the rack into the shafts of the film tray.

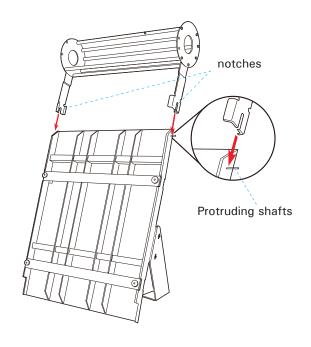


 When done, fasten the Quick-lock Nuts clockwise to each shaft to secure the Film-rolling Rack at the top of the film tray.

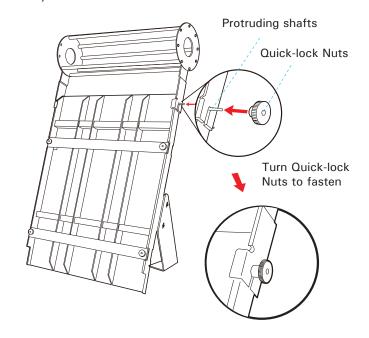


4_{\perp} Install the Base Tray

- Before installing the Base Tray, make sure that there is no any type of feed tray mounted on the digitizer. If there is, remove it from the digitizer first.
- Look for the four holes located at both ends of the fronttop of the digitizer.

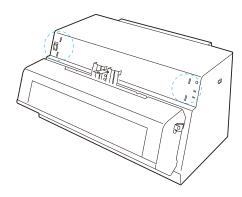


Align and insert the hooks on the rear of the Base Tray into the holes, then push down the tray to snap it into place.

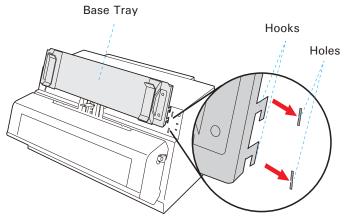


Insert the hooks into the holes and push down

4. Make sure that the Base Tray has been inserted correctly.

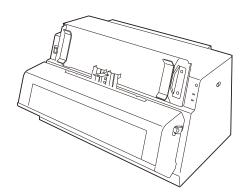


$oldsymbol{5}_{\scriptscriptstyle \perp}$ Mount the MFF on the Digitizer

- 1. Locate the slots on both ends of the Base Tray.
- Gently grab both sides of the assembled film tray (MFF), and insert it into the Base Tray along the slots until the MMF stops in place.

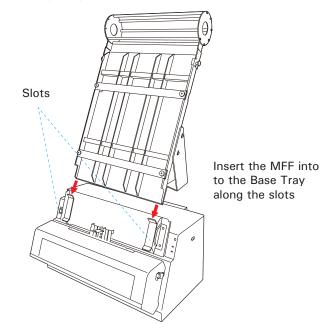

If necessary, loosen and displace the position of the screws, you can adjust the tilt angle of the MFF on the digitizer appropriately.

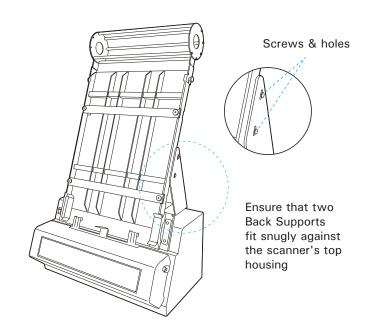

NOTE: For how to use the Multi-channel Film Feeder (MFF) with the digitizer and scanning software in details, refer to the user's manual on the CD/DVD in your digitizer package.