


# Unpacking Package Contents

Follow the steps below to take out your digitizer and other accessory components.


## Step 1

Lift up and open the top cover.

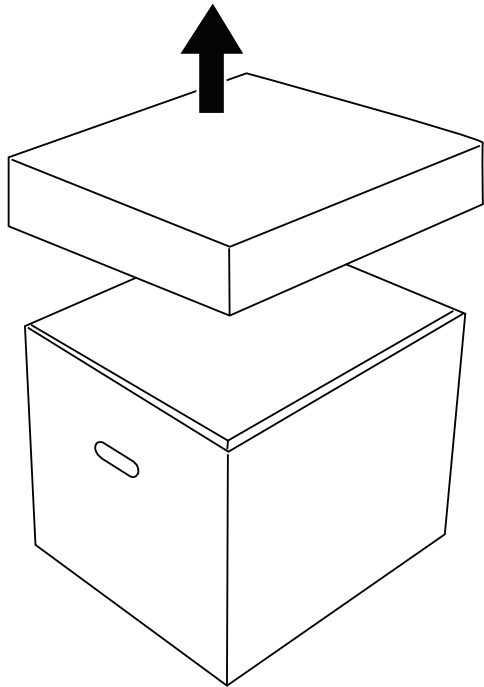


## Step 2

Remove cardboards from the carton.

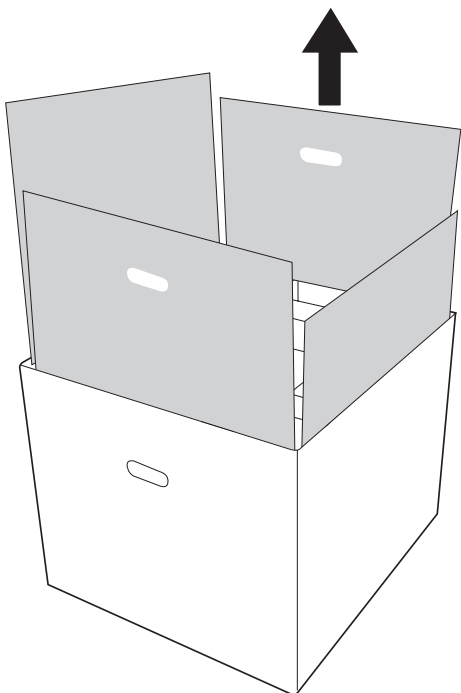


## Step 3

Take the accessory box at top out from the shipping carton.

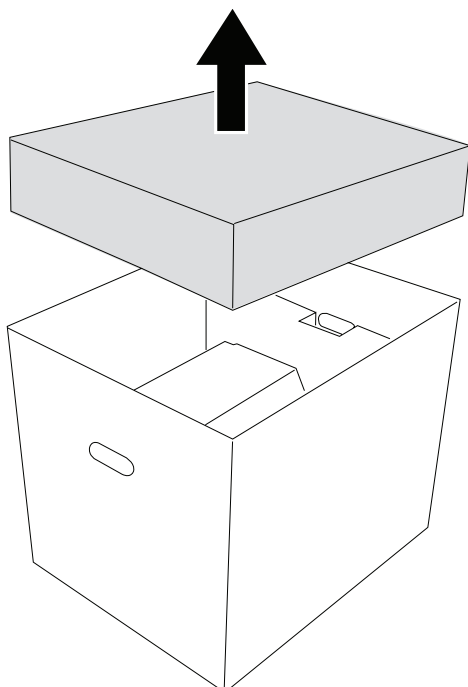


## Step 4

With both hands, hold the two sides of the digitizer and lift it up from the carton firmly. Due to the heavy weight of the digitizer (about 20 pounds), make sure you can handle it properly before removing it from the carton.

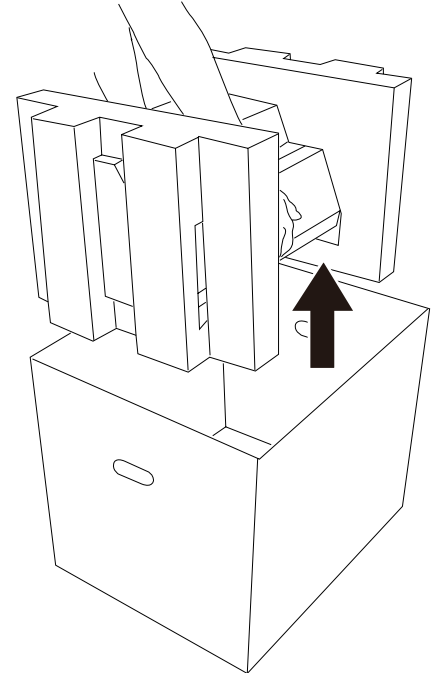

## Step 5

Turn over the package and lift up the upper foam support.

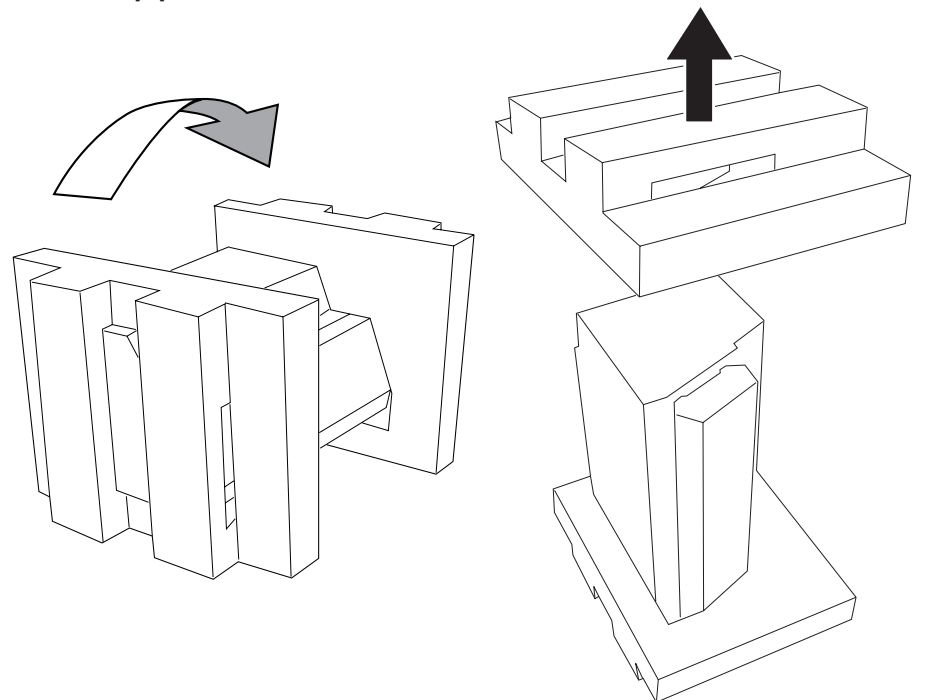

## Step 6

Pull out the digitizer from the bottom foam support.

