


Unpacking Package Contents

Follow the steps below to take out your digitizer and other accessory components.


Step 1

Open the shipping carton and remove the accessory box at top from the carton.

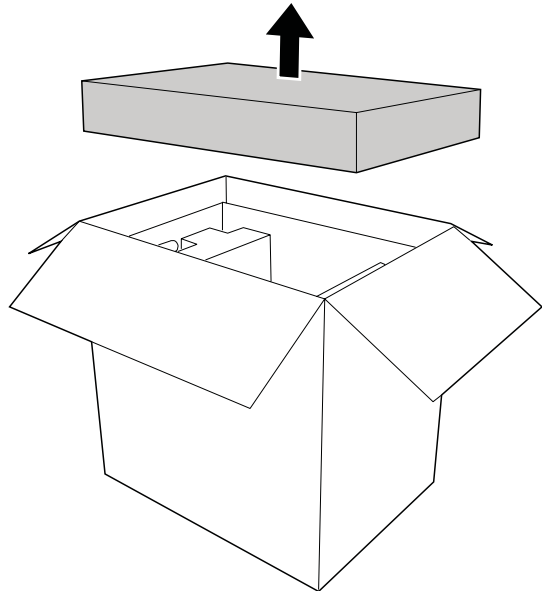


Step 2

With both hands, hold the two sides of foam supports and then lift the whole digitizer package out from the carton firmly. Due to the heavy weight of the package (about 57 pounds), make sure you can handle it properly before removing it from the carton.

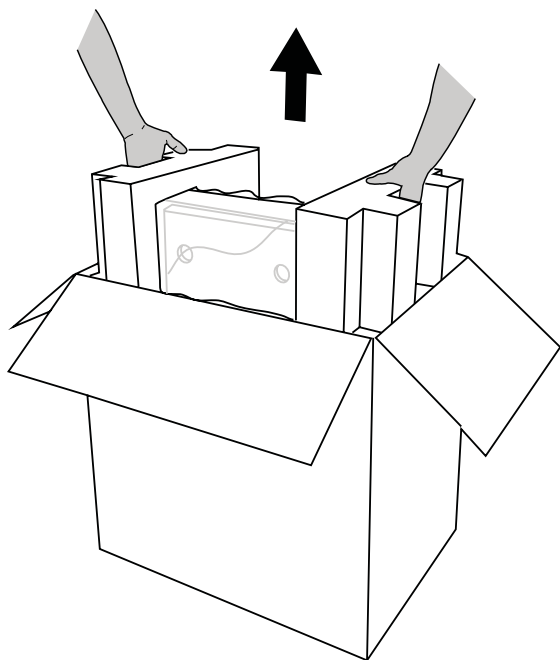


Step 3

Turn over the foam supports and make the digitizer package stand vertically.

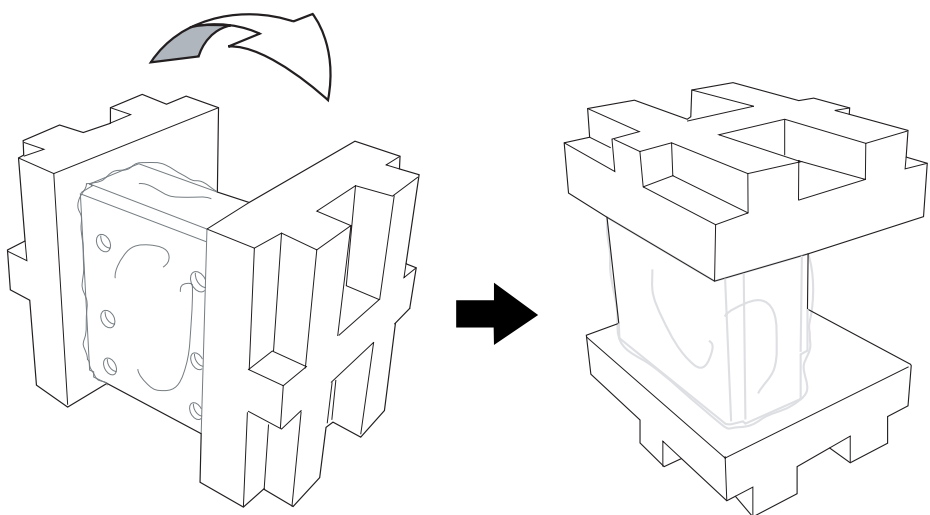


Step 4

Lift up the upper foam support.

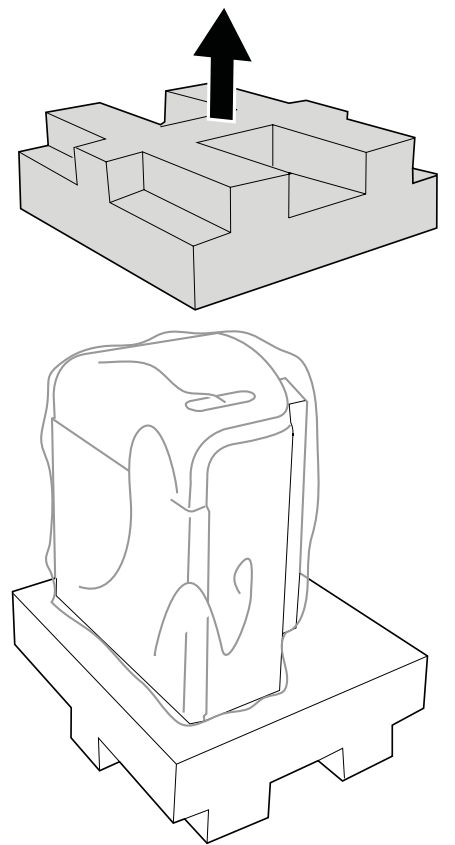

Step 5

Pull out the digitizer from the bottom foam support.

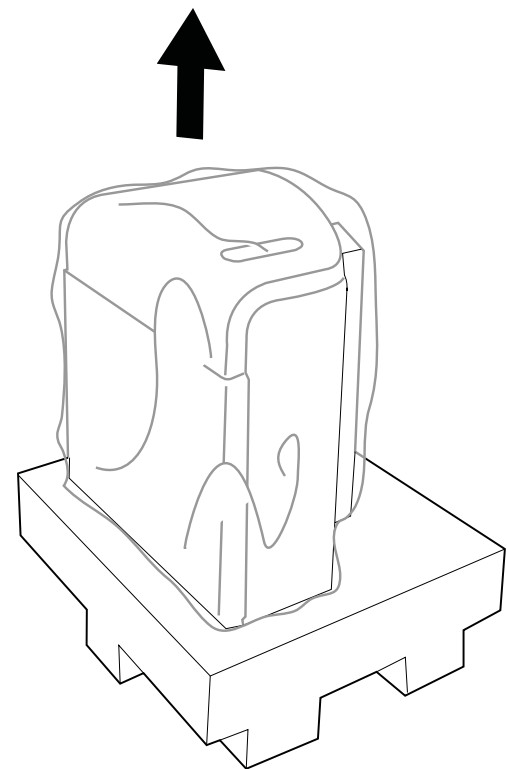

Step 6

Take the digitizer out from the wrapped plastic bag and then place it on a clean and flat surface.

